




Adjustment Instructions



Removing the door

1. Clip and Slide Cover

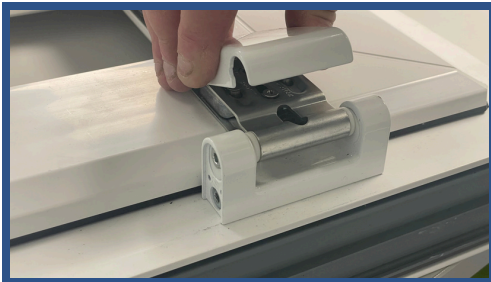


Open the door to access the cover retaining screws. These are self-retaining screws, so to release the cover, the screws must be fully unscrewed.

2 Undo adjustment locking screws and slacken fixing screws

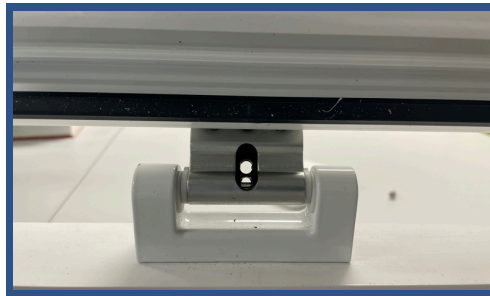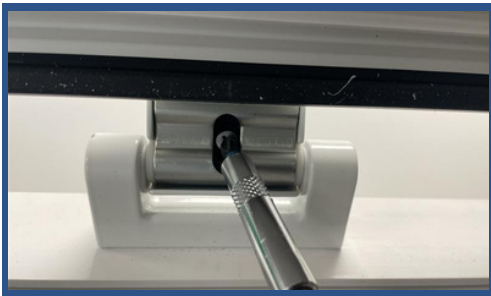

Pull the cover out towards the centre of the door. On release a click will be heard. If the cover does not open by hand a screw driver can be used behind the knuckle to gently assist opening. Repeat stages 1 and 2

3. Undo adjustment locking screws and slacken fixing screws

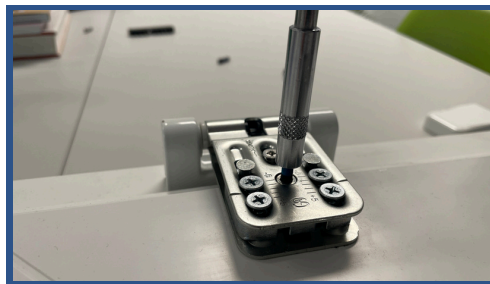

Rotate the Allen key clockwise or anti-clockwise to achieve the required lateral adjustment. Ensure the adjustment is evenly distributed across all hinges.



Adjustment Instructions

Axis Flip Hinge

4.Compression and Height Adjustment



Compression Adjustment

+/- 0.5mm

4mm Allen Key

Height Adjustment

+ 5mm

4mm Allen Key

Rotate the Allen Key clockwise or anti-clockwise to achieve the desired compression setting. Ensure the compression is distributed evenly across all hinges.

Note: Positive "click" positions can be felt during rotation — there are two clicks in each direction from the central position.

5.Lift Door



To lift the door of the frame, open door to 90 degrees, Lift off the frame sledge